

# Mini-Cart Hot Dog Cooker

## INSTALLATION

---

Install the Mini-Cart in a level position. Connect the lead-in cord to a suitable outlet of correct voltage. **A.C. ONLY!** Wattage and voltage as indication on nameplate. Use grounded 120 V A.C. Circuit.

## OPERATING INSTRUCTIONS

---

1. Fill bottom of well with hot water until it contacts the bottom of the food pans. If perforated pan is used, do not allow the water to enter the pan.
2. Place holding pans into well. (Any combination of chafing dish pans to completely cover the well.)
3. Preheat on high for 30 minute. (Water temperature should be at least 180°F.)
4. Place food product in pans and allow it to heat on high until internal temperature is at least 150°F. (When cooking hot dots, fill non-perforated pans approximately half-full of hot water before adding hot dogs.)
5. Adjust temperature setting to hold product at least 150°F serving temperature.
6. Keep lids in place to help maintain temperature.

## CARE AND CLEANING INSTRUCTIONS

---

Although corrosion resistant, stainless steel should be cleaned daily to prevent pitting. **DO NOT** use steel wool to clean, stainless steel wool can be used.

1. **UNPLUG THE POWER CORD FROM THE OUTLET!!!**
2. Do not leave water in pans overnight.
3. Clean covers with stainless steel cleaner.
4. Clean pans to sanitize.
5. Clean outside of appliance with a soft cloth, soap and hot water.

## Safety Precautions

- Water may be hot, allow to cool to avoid serious burns.
- Any alterations to this equipment will void the warranty and may cause a dangerous situation. **NEVER** make alterations to the equipment. Make sure all machine switches are in the **OFF** position before plugging the equipment into the receptacle.
- Machines must properly grounded to prevent electrical shock to personnel. **DO NOT** immerse kettle, warmer, or any part of of this equipment in water. Always unplug the equipment before cleaning or servicing.