

Smoker - Model 050

Important Safeguards

- 1**
Read all instructions.
- 2**
For household use only.
- 3**
Do not touch hot surfaces. Use handles or knobs.
- 4**
To avoid electrical shock, do not immerse cord, plugs or any part of unit in water or other liquid.
- 5**
Do not leave hot oven unattended with door open.
- 6**
Unplug from outlet when not in use and before cleaning. To disconnect, turn any controls to "OFF". Remove plug from outlet. Allow to cool before putting on or taking off parts.
- 7**
Close supervision is necessary when any appliance is used by or near children.
- 8**
Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- 9**
The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 10**
Do not expose to rain.
- 11**
Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 12**
Do not place on or near hot gas or electric burner, or in a heated oven.
- 13**
Extreme caution must be used when moving an appliance containing hot grease or other hot liquids.
- 14**
Do not use appliance for other than intended use.
- 15**
Do not operate a wet smoker.
- 16**
Do not use fuel such as charcoal briquettes with this appliance.
- 17**
CAUTION-to ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
- 18**
CAUTION-to reduce the risk of electric shock, keep extension cord connection dry and off the ground.

- 19**
Store products indoors when not in use--out of reach or children.
- 20**
Do not clean this product with a water spray or the like.
- 21**
Service should be performed by an authorized service representative only.
- 22**
Extension cords are available and may be used if care is exercised in their use.
- 23**
If an extension cord is used (a) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (b) the extension cord should be of a grounding type, 3-wire cord, and (c) the longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
- 24**
Outdoor extension cords should be used with outdoor use products and are surface marked with suffix letters "W-A" and with a tag stating "Suitable For Use With Outdoor Appliances".

Setting Up

Choose a Location

Choose a dry, sheltered and well-ventilated location. Do not expose to rain. Do not place flammable or combustible materials on or adjacent to the Model 050/055

Ventilation

A small amount of smoke will escape from the vent hole in the top of the Model 050/055 and from around the door. For this reason, operation indoors is not recommended unless adequate ventilation is provided.

Electrical Power Connections

Connect the Model 050/055 to the power supply by plugging the power supply by plugging the power cord into a standard, 3-prong, 120V receptacle that is protected by a breaker or fuse rated at 15 amperes.

A long or light-duty extension cord will reduce the efficiency of the heating element