

Smoker - Model 050

Shutdown

IMPORTANT!!!

If oven is to be left unattended with the door open, the following steps should be taken.

ON/OFF control must be in **OFF** position.

Remove the wood box from the oven and douse the contents with water. Remove any wood remaining on the burner. Rake it on to the foil bottom. Remove foil from the oven immediately.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN A FIRE HAZARD!

Clean-Up

ALWAYS DISCONNECT THE OVEN FROM ITS ELECTRICAL SUPPLY BEFORE CLEANING OR SERVICING.

The smoker must be kept clean. Loose grease and scale should be removed regularly to prevent build-up, which may cause strong fumes. It is desirable to allow seasoned coating, such as that found on a well-seasoned cast iron skillet, to remain on the walls. For this reason, we do not recommend attempting to restore the oven wall to a "like new" state after each cooking.

The use of detergent, chemical cleaners or oven cleaners is not advised.

IMPORTANT: Caustic oven cleaners may damage heating elements and grills. Use of oven cleaners or other caustic cleaners will void warranty on the heating elements and grills.

Follow this procedure after each load:

Step 1

Disconnect oven power supply.

Step 2

Allow the oven to cool.

Step 3

Remove the grills and racks; scrape and wash with soap & water. You can put them right in the dishwasher.

Step 4

Empty wood box using extreme caution - it will be HOT if your smoker has recently been turned on.

Step 5

Brush wood remnants ash from burner. Wood, coals, and ashes are HOT - dispose with care.

Step 6

Discard aluminum foil.

Step 7

Remove all grease from interior of oven, using paper towels or cloths.

Step 8

Empty drip pan.

Step 9

Leave door slightly ajar when oven is not in use. Refer to shutdown safety precautions mentioned in the previous pages.

Step 10

Scrape loose grease and scale from the walls with flat edge scraper.

Step 11

Replace rack and grills.

IMPORTANT:

Bottom of oven must be kept clean. Change foil in bottom of oven and from top of wood box after each cooking and remove all excess grease from interior of oven. Be sure that drain hole is open at all times. If drain becomes plugged, oven bottom can fill with grease and a fire hazard may occur.